


## CARDIO U10 UPRIGHT BIKE

ITEM #U10

### Standard frame colors

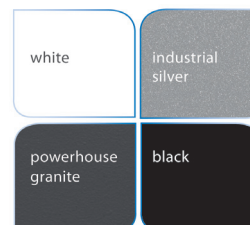

\* U10 shown here in Nautilus Blue, a custom color upgrade.



Sophisticated design, comfortable ride and superior performance – all in one bike. We assembled a team of cyclists and trainers to help us push the envelope on performance and comfort while redesigning the exercise bike experience.

The Performance Comfort seat is wide towards the back to provide maximum user comfort when seated in a more upright position, while tapering towards the front to allow for a more performance, “real bike” feel while the rider is in a bent forward position. Users will now look forward to a highly effective, yet comfortable cycling experience.

#### Frame and Power Requirements

- Available in custom frame colors
- Industrial grade poly-V belt provides nearly silent operation and maintenance-free performance
- Eddy current magnetic brake technology for smooth quiet maintenance free service
- Eddy current brake has no frictional components or brushes to ever wear out or need replacing
- Minimum/maximum resistance is 15-750 watts
- Water bottle holder
- Contact heart rate (HR) sensors and wireless telemetry
- Remote Operation Control (ROC) puts adjustment at your fingertips.
- Ergo bars enable multiple riding positions
- Ratcheted foot straps for easy fitting
- Horizontal and hydraulic vertical seat adjustment for effortless seat positioning
- ISIS bottom bracket and 3 piece crank ensures smooth, stable feel.
- Power requirements: Equipment is supplied with a 60 watt battery charger/power supply. Charger/power supply operates from a 100 to 240 VAC, 50-60 Hz wall source.

#### Console

- 10.2" LCD entertainment touch screen, built-in multimedia with iPod connectivity, digital TV
  - The 10.2" console requires the charger/power supply to be plugged into a wall power source while in use
- 7" touch screen available with iPod connectivity
  - The 7" console models can run as cordless or corded (Display remains lit if plugged in)
- Similar cardio console on all cardio units for ease of use
- 10 Workout Programs: Quick Start, Manual, Fat Burner, Calorie Burner, Speed Intervals, Custom Intervals, Random Intensity, Heart Rate Intervals, Calorie Goal, Distance Goal, Heart Rate Zone Trainer
- Entertainment display has integrated iPod holder

#### Unit Specifications

- Dimensions: 27" W x 47" L x 60" H, Machine Weight: 158 lbs
- Warranty: Frame; 15 years. Parts; 3 years. Wear Items/Labor; 1 year. (The labor warranty is not applicable to shipments outside of the U.S.A.)